




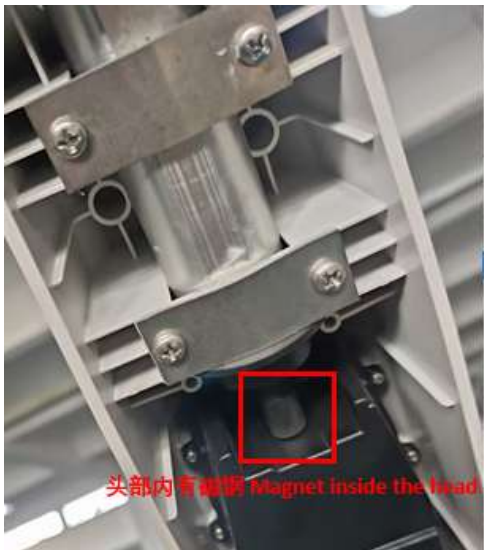

1. Check if the anti-loosening nut of the rear wiring harness is properly tightened.
2. Remove the four screws at position ①.

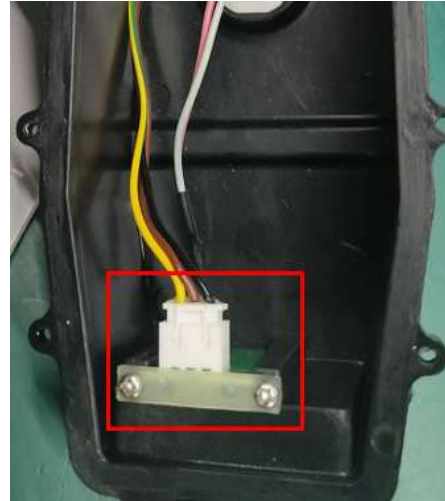


3. After disassembly, pull out the handle, but manually hold the magnet at the head position to prevent it from falling out.
4. Loosen the anti-loosening nut of the rear wiring harness.

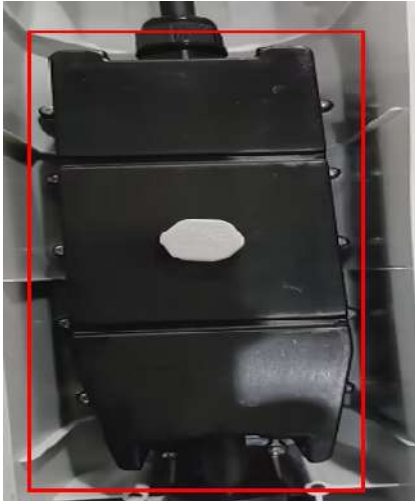

5. Remove 10 screws from the back cover.
6. Check if this connector is loose. If loose, apply adhesive to secure it.



7. Do not drop the magnet. If dropped, reassembly is required with the marked surface (dot side) facing outward.
8. Before securing the rear cover, confirm the gasket is properly installed. Tighten screws in a crisscross pattern.

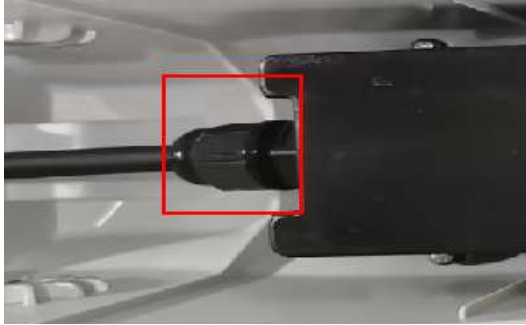

9. After securing the rear cover, tighten the anti-loosening connector of the wiring harness.