

## Quick Install Guide

### 4-Bow Bimini Top for Inflatable Boats

**Fits:** Saturn SD260–SD518 models (not for KaBoats)

**Width Range:** 59"–67". Can be pushed together as close as 59" or pulled apart up to 67"

**Materials:** 600D PVC-coated fabric, 1" anodized aluminum frame

**Use:** Sun/rain protection, usable while boating

#### Installation Steps:

1. **Assemble Frame** – Follow included parts list.
2. **Adjust Width** – Once fully assembled, flex support poles to match boat (59–67").
3. **Mounting Options:**
  - **A. Splash Guard Grommets** – Attach with zip ties (preferred).
  - **B. Oarlocks** – Enlarge end holes to fit pins; secure with rubber cords.
  - **C. Splashguard Tops** – Use zip ties on models like SD430/SD470.
  - **D. No Mounts?** – Glue D-rings or included hardware to tubes.

---

#### Tips:

- Poles flex to fit—secure one side first, then pull in other.
- Use rope to hold poles together during setup, then cut after done.
- Pulling on splash guards is safe, will not break.

---

**Questions?** Refer to your retailer or online Saturn support. Visit web page where item was ordered then click on Attachment tab to download detailed manual or scan QR code below:



**Q: The bimini top looks wider than my boat. Is it too wide?**

**A:** No. The support poles are flexible and can be pushed together or pulled apart to fit widths from 59" to 67". Attach one side first, then flex the other into place. Use zip ties, bolts, or rope to hold poles in position during install. Mount to splash guard grommets, D-rings, or glued pads. Pulling slightly on splash guards is safe and won't cause damage.

**Thank you for choosing our Deluxe 4-Bow Bimini!**