


Saturn Inflatable Pedalboard Kayak

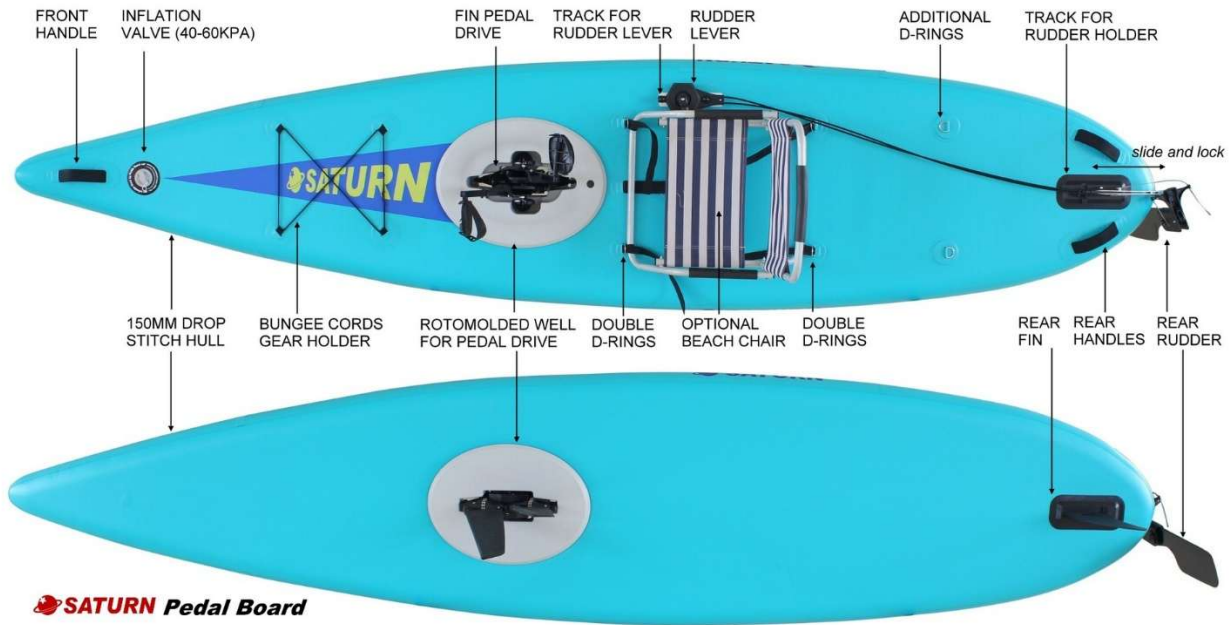

Kayak Assembly Instructions

1. Before unpacking, note how the kayak is folded for easier re-packing after use. Take a reference photo if necessary. Use the optional lashing tie-down to keep the folded kayak compact.
2. Unroll the kayak on a clean, smooth surface. Ensure the rotomolded pedal drive well is positioned straight forward, not at an angle.
3. Open the valve cap. Confirm the pushpin is in the upper position for inflation. Push and twist the pin to lock in the lower position for quick deflation.
4. Inflate the drop-stitch floor until it feels completely rigid. If using a hand pump, continue until the floor is rock hard.
5. If using an electric inflator, set the pressure to 40–60 KPA. (40 KPA is typically sufficient and inflates faster.)
6. Install the rear keel and secure it with the locking tab. Fins can be attached before or after inflation. Smaller fins increase maneuverability and make the kayak more responsive.
7. Once in the water, place the fin pedal drive into the rotomolded well and lock it in place. Ensure the pedal drive faces forward.
8. Install the optional beach chair, securing it with straps through the double D-rings. Any beach chair can be used, but a low sand-type chair is recommended for better stability, especially for heavier riders. Adjust pedal position forward or backward using the push locks to achieve a comfortable pedaling position.

Saturn Inflatable Pedalboard Kayak

9. Your kayak is now ready for use. Sit in the chair and pedal forward using the pedal drive. Use the kayak paddle for steering — either by taking a few strokes or by holding one blade under your arm with the opposite blade in the water to make slight adjustments. If the kayak drifts to one side, deflate the floor, rotate the rotomolded well slightly in the opposite direction, and re-inflate.
10. To install the optional rudder and lever system (included as a bonus), slide the rudder holder into the track on top of the kayak and secure the lever to the track near the seat.

Important Assembly Notes

- Fully assemble the kayak and pedal drive at home before your first outing.
- Ensure all parts fit properly and check that all nuts and bolts are tightened before use.

Important Warnings:

- ALWAYS WEAR A PERSONAL FLOTATION DEVICE AND HAVE SAFETY GEAR PRESENT.
- INSPECT THAT ALL BOLTS AND SCREWS ARE TIGHT AND NOT LOOSE.
- DO NOT LOAD A HEAVY WEIGHT OR SIT ON A KAYAK WHEN FINS ARE ON THE GROUND.

HEAVY LOADS CAN BREAK FINS.

- DO NOT DRAG THE KAYAK OVER PAVEMENT. USE CART OR TROLLEY.
- MAKE SURE TO LUBRICATE THE PEDAL DRIVE FROM TIME TO TIME. FLASH IT WITH

FRESH WATER AFTER USE IN SALTWATER.

- DO NOT LEAVE FULLY INFLATED KAYAK FOR PROLONGED TIME UNDER SUN. KAYAK

MUST BE STORED IN A WELL VENTILATED, SHADDED AREA WHEN NOT IN USE.

- PLEASE VISIT THE WEB PAGE FOR PEDAL KAYAK, AND CLICK ON THE ATTACHMENTS TAB

FOR ADDITIONAL MANUALS AND INSTRUCTIONS.

Quick Tip:

Inflate kayak next to your car. Use optional kayak trolley cart to easily move kayak to water line. Roll cart with kayak on top into water line, so that kayak front floating on top of water. Grab kayak rear handle, lift from cart and drag rear into the water. Load back same way. Be smart. No need to lift heavy kayak. Use cart. Secure kayak to cart with 2 rubber bungee cords. Kayak cart can be submerged into the water.