

FSUP430 Micro Skiff / SUP / Kayak – Instructions.

Assembly Instructions

1. Before unpacking, note how the product is folded for easier repacking. Take a reference photo if needed.
2. Unroll the board on a clean, smooth surface. Inflate and inspect for any shipping damage. Contact the seller if you notice any issues.
3. Open a valve cap and confirm the pushpin is in the upper position for inflation. Push and twist the pin to lock it down for fast deflation. The FSUP430 has two valves for quicker deflation. Open both to release air faster.
4. Inflate the FSUP430 until it feels fully rigid. With a hand pump, continue until the board feels hard and firm.
5. If using an electric inflator, set the pressure to 40–60 KPA. (40 KPA is typically enough for sitting and inflates faster.)
6. Install the rear removable fin and secure it using the locking tab. The fin may be attached before or after inflation. If using a motor or electric fin, a removable fin is not needed.
7. The skiff board supports multiple seating options, from a beach chair to a zero-gravity lounger or a fishing chair on a pedestal. Choose your preferred seat and secure it using the grommets in the splash guards and optional lashing tie-downs. Ensure the seat is firmly attached and cannot fall off during use.
8. The FSUP430 supports several propulsion options. For best results, use an electric fin instead of the included removable fin. The included motor mount can be attached at the rear for use with an electric trolling motor or a small gas outboard up to 3 HP.
9. Secure the motor mount to the set of D-rings located at rear using the two provided lashing tie-downs. Tie a knot at the free end of the lashing strap to prevent slipping when using heavier motors, or upgrade to heavier-duty lashing straps. Use additional option lashing tie downs for heavier motors.
10. Ensure the motor shaft rests against the outer rear surface of the board for proper support. The shaft may touch the surface without causing damage during operation.

Important Safety Information

- Always wear a personal flotation device and carry proper safety gear.
- Check that all bolts and screws are tightened.
- Do not load heavy weight or sit on the FSUP430 while fins are in contact with the ground. Doing so may break the fins.
- Do not drag the board on pavement. Use a cart or trolley.
- Do not leave the FSUP430 fully inflated in direct sunlight for long periods.
- Store the board in a shaded, well-ventilated area when not in use.
- Visit the product webpage and click the “Attachments” tab for additional manuals and instructions.

Quick Tip

Inflate the FSUP430 near your vehicle for convenience. Use an optional kayak trolley cart to move the board to the waterline. Position the cart under the front of the board and secure it with 2–4 bungee cords over the hull or attached to a D-ring. Grab the two rear handles and pull or push the board to the water. Place any heavy gear over the cart location for easier transport. Work smarter—use the cart and avoid lifting the heavy board unnecessarily.

IMPORTANT: Please visit the product page for more details and the latest updates.