

FLAT PACK BIMINI

ASSEMBLY INSTRUCTIONS

Components

- 16 x #8 x 1" Self Tapping Screws
- 2 x Stainless Steel Saddles
- 2 x Rear Support Arms
- 2 x Side Arms
- 2 x Strap Assembly
- 1 x Bow kit complete with Cover
- 1 x Sock
- 4 x side Mounts (for side mount only)
- 1 x tube of nutlocker



INSTALLATION INSTRUCTIONS



1. Take sock off top of cover.



2. Open bimini top and find the front.



3. Locate corresponding numbered arm.



4. Fit together corresponding



5. Insert long bolts into front & back arm,



6. Attach a drop of nutlocker inside nut and tighten


7. Repeat above steps 3 to 6 on the opposite side.



8. Attach rear arm to corresponding number.



9. Secure main pole and rear pole to gromets in splash guard with plastic cable ties.

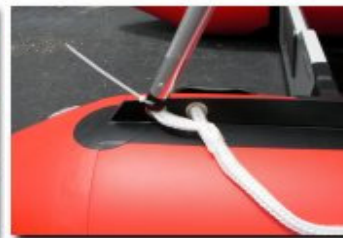

10. Adjust front straps to proper tension and secure to any suitable points in front of the boat.



Notes:

If splash guards are not available, then you can try installation directly over pinned oarlocks. Otherwise, additional optional hardware need to be glued directly to inflatable boats tubes.